

4.4. Pipes:

- 4.4.1. Disconnect the pipeline from the top of the bulk tank and replace the black rubber cap. **DO NOT** Drop the pipeline onto the floor the prevent damage to the pipe.
- 4.4.2. Wash all pipeline attachments with soapy water. Rinse. Reattach the pipeline above the sink.
- 4.4.3. Slip the pipeline extension back into the hole on top of the sink.

4.5. Wash:

- 4.5.1. Press the **WASH** button on the main control panel.
- 4.5.2. Make sure **ALL** milkers read **WASH** and that they are washing properly. Listen for air leaks and adjust
- 4.5.3. valves accordingly.

4.6. Wash stripping cups and the teat dip cups.

- 4.6.1. Disassemble the strip and teat cups.
- 4.6.2. Soak all parts in hot soapy water. (Minimum 10 minutes)
- 4.6.3.